Installation Instructions

Before you Build | AluBase Shadowline Skirting Preparation

Check that all listed parts are included prior to beginning installation.

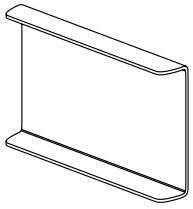

Straight Joiner

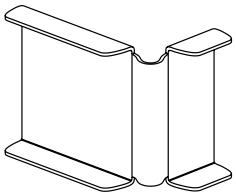

Corner Joiner

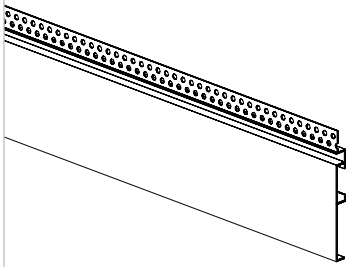

Shadowline Skirting Board

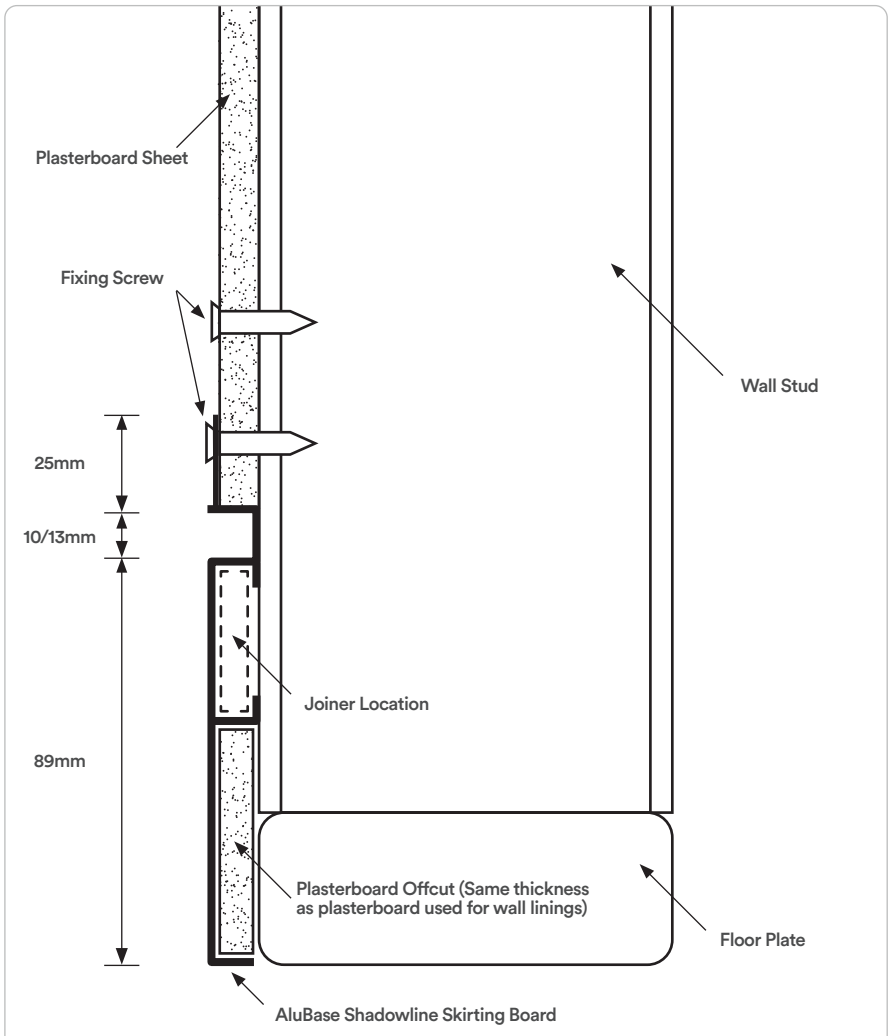

Installation | AluBase Shadowline Skirting Assembly

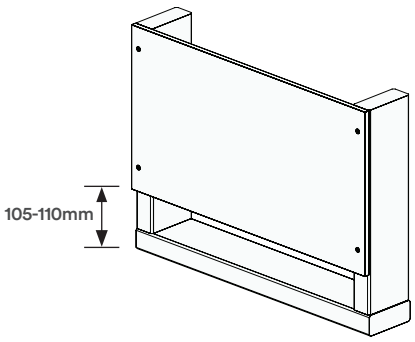

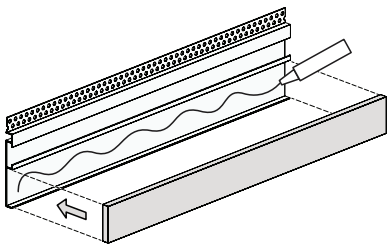

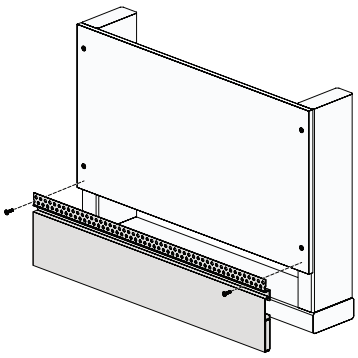

A Leave 105-110mm gap between bottom of plasterboard and floor level.

B Using an offcut of plasterboard used to line walls, cut a 45mm strip of the length of the skirting & adhere plasterboard to rear of the skirting board with construction adhesive.

C Fix skirting board to wall using plasterboard screws through the perforation in skirting board. Ensure screws penetrate into the wall studs.

Information contained within this document supersedes all previous versions and is subject to change without notice.

AluBase | Aluminium Shadowline Skirting

Installation Instructions

Straight | Connector Installation

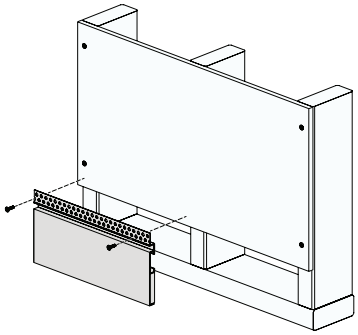

1A Attach first skirting board section below plasterboard on wall.

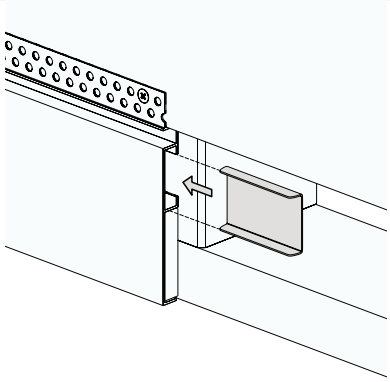

1B Insert straight joiner into the skirting board section.

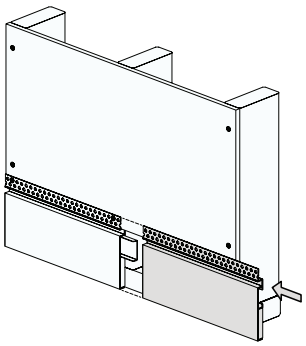

1C Slide second skirting board section into straight joiner & screw into wall.

External Corner | Connector Installation

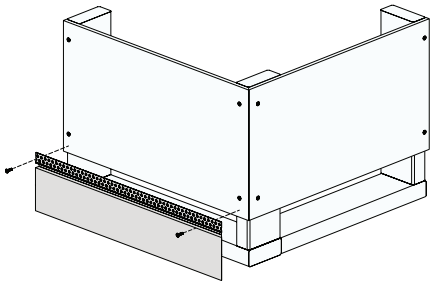

2A Cut 2 skirting board sections at an external 45° angle. Attach first section of skirting board to wall corner & screw in.

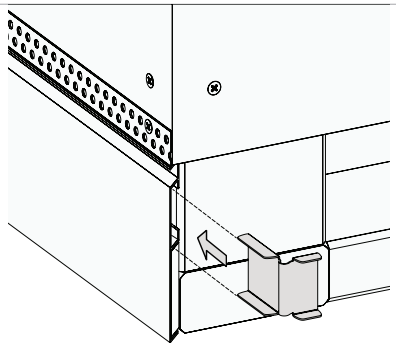

2B Insert long edge of corner joiner into first skirting section board.

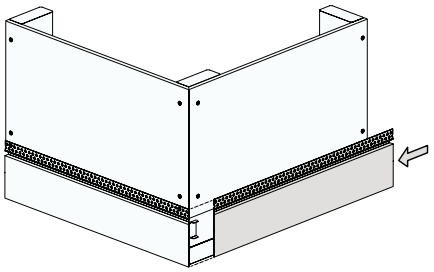

2C Slide second skirting board section into corner joiner & screw into wall.

Internal Corner | Connector Installation

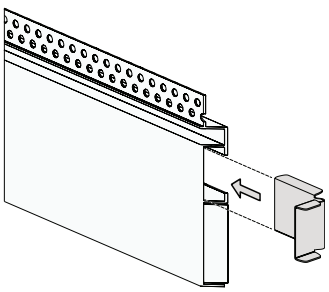

3A Cut 2 skirting board sections at an internal 45° angle. Insert long edge of corner joiner into first skirting section board.

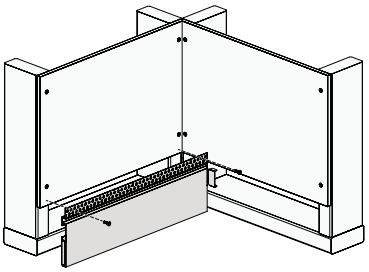

3B Attach first section of skirting board to wall corner & screw in.

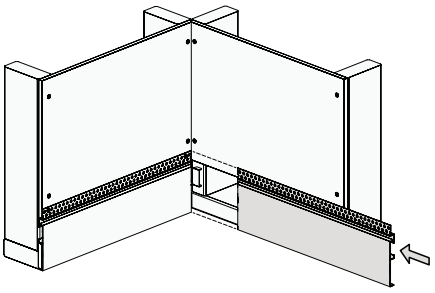

3C Slide second skirting board section into corner joiner & screw into wall.

Information contained within this document supersedes all previous versions and is subject to change without notice.