EzyJamb | Installation Instructions

EZC Classic Adjust Door Frame

Video Installation Guide

Step 1

Ensure that the stud opening is square and level and measures:

Stud opening sizes for Herline /Liftoff Hinges

Width Single Door	Door Width +15mm Clearance
Width Double Door	Door Width +18mm Clearance
Full Height	Door Height +13mm + Floor Coverings
Less than Full Height	Door Height + 8mm + 10mm + Floor Covering

Stud opening sizes for RY60 Concealed Hinges*

Width Single Door	Door Width +40mm Clearance (includes 25mm packer on hinge side)
Width Double Door	Door Width +63mm Clearance (includes packers on both hinge studs)
Full Height	Door Height +13mm + Floor Covering
Less than Full Height	Door Height + 8mm + 10mm + Floor Covering

**RY60 Stud Opening Detail: Prepare a 25mm thick packer fixed to hinge side of jamb stud. Route packer to create clearance cutouts at hinge locations.* Packer avoids cutting into the structural stud and maintains frame strength. *Refer to the RocYork RY60 Installation Instructions document.*

ⓘ It is strongly recommended that a timber stud or a 0.75 BMT metal stud is used on both sides of the opening.

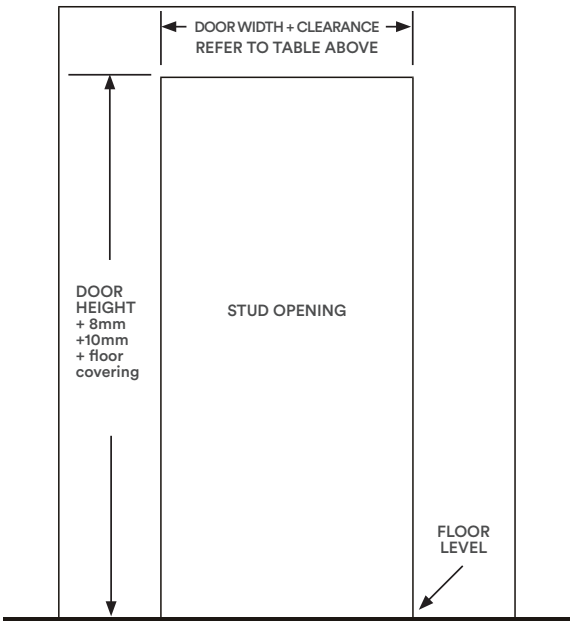

Step 2

Join the two sections of the stile and fit stile tightly over the wall. Fasten hinge side, making sure jamb is level and as tight against stud opening as possible. Then screw at 200mm centres up stile, screwing back through plasterboard into stud work. See *Detail 'B'* and *'C'*.

Double screw all ends as per *Detail 'D'*. and beside hinge position - both above and below hinge as shown on *Detail 'E'*.

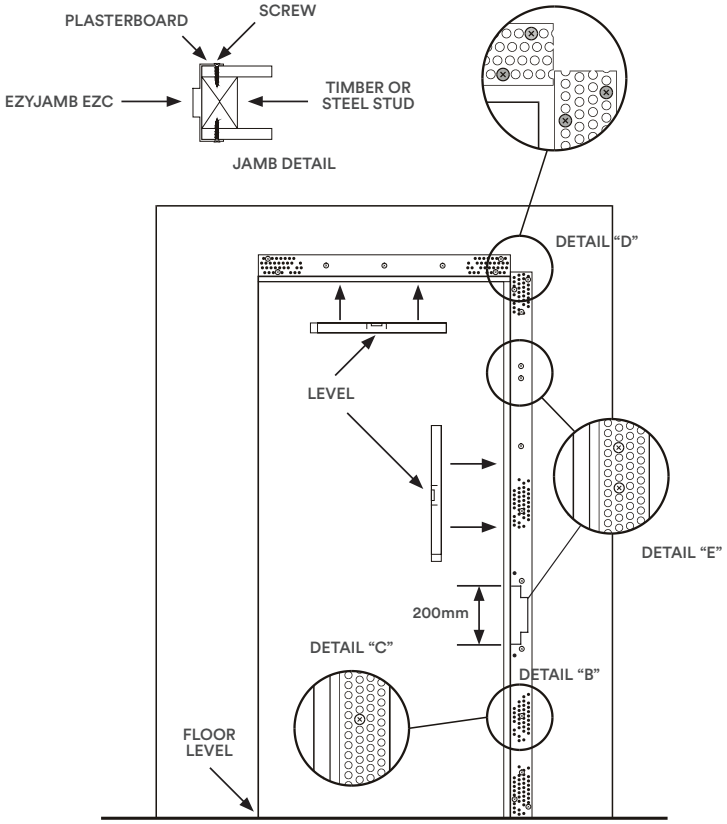

Step 2A | Head Installation

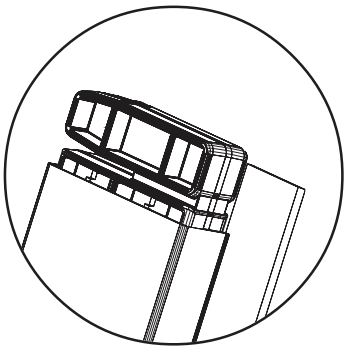

Head joiners as inserted in jamb.

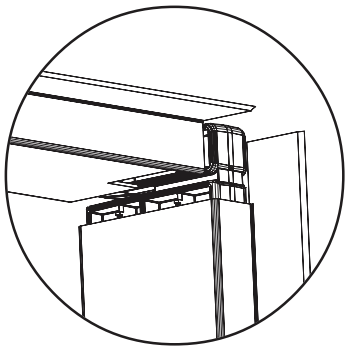

Locate head into joiner and make flush with jamb so the head joiner is not seen.

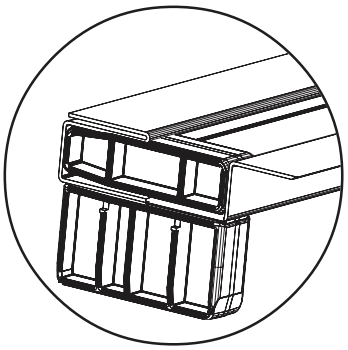

Remove the remaining head joiner out of the strike jamb into the end of the head (as shown) to receive the strike jamb.

EZC Classic Adjust Door Frame

Step 3

Fit the final vertical section (strike jamb) into the head section joining clip. Ensure that the spacing between the two vertical sections are spaced evenly at the required distance.

ie: 820mm door, opening is 825mm
720mm door, opening is 725mm

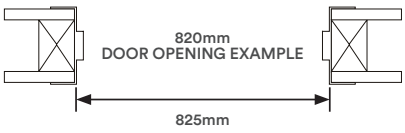

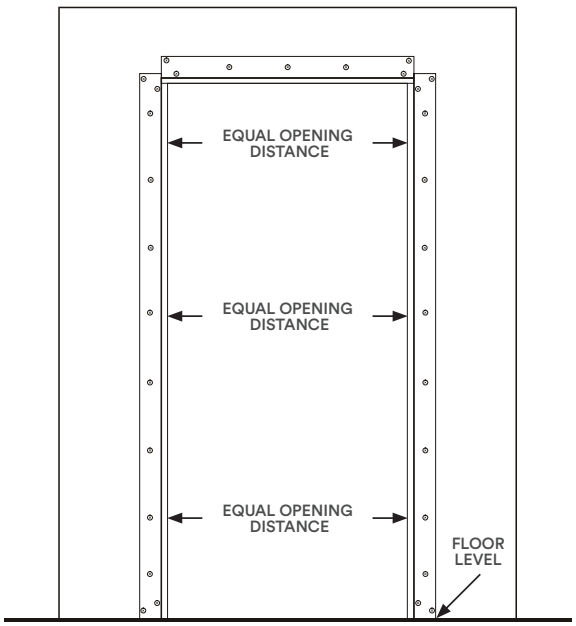

Step 4

Ensure the perforated side strips sit flat against the plasterboard to enable the jamb sections to be easily set into the wall surface. ***All the corners must be taped and plastered/jointed in as Detail 'F'.*** Finish the jamb with approved plaster/jointing compound.

Hang the door in position leaving about 3mm clearance from the top and the hinged side using the EzyJamb Standard or concealed Hinges. Surface mount the striker plate into position to align with the latch plate punching.

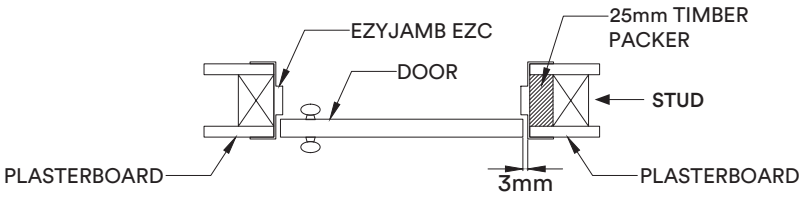

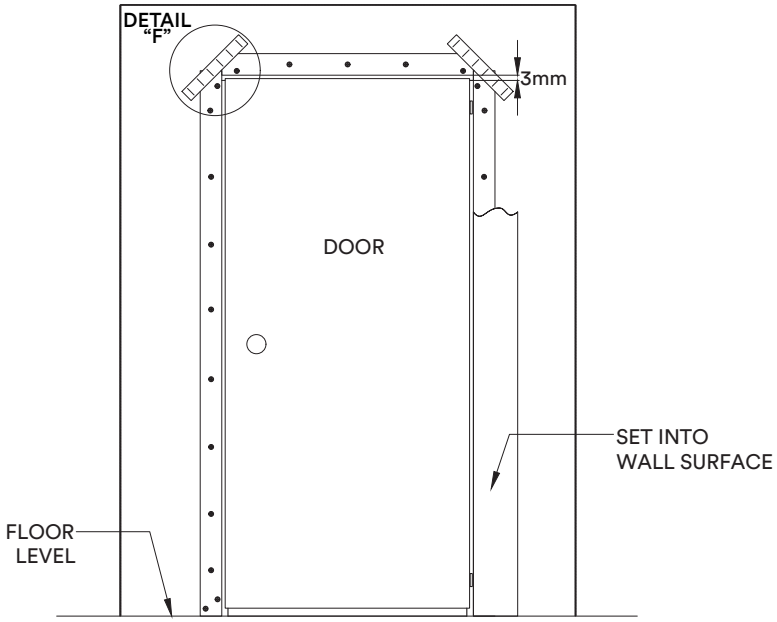

Door Rebate and Latch Plate Detail

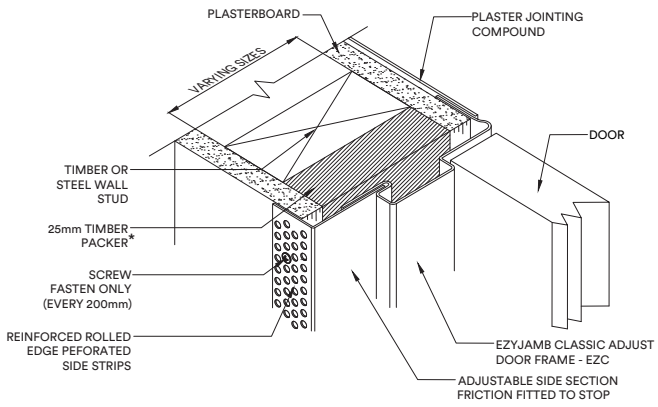

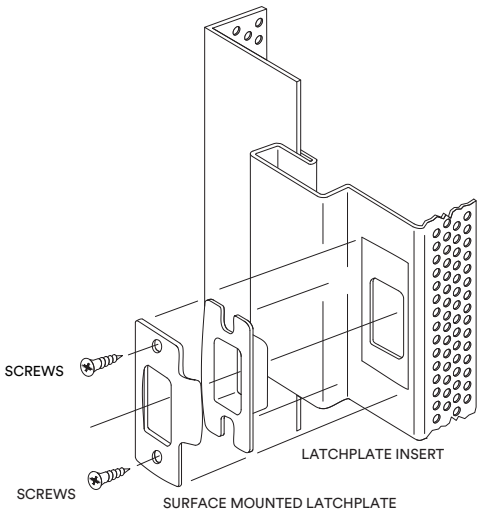

* include packer when using RY60 concealed hinges.