SlideSet | The Flush Finish Cavity Slider Solution

Installation Instructions

Installation Video

Before you Build | SlideSet Preparation

Check that all listed parts are included prior to beginning installation.


2x Wheel Carriage


1x Door Guide


2x Plastic Holding Tab


2x Door Stopper


2x Fixing Screw + Nut


2x Tightening Screw + Nut


2x Base Bracket


2x Centre Pin

8x Screw A (16mm)


8x Screw B (40mm)


6x Screw C (30mm)


2x Masonry Plug


1x Spanner

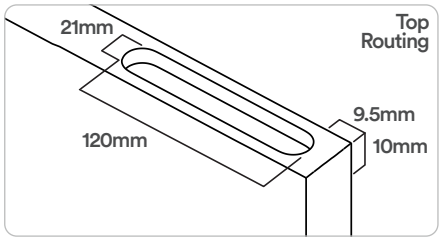

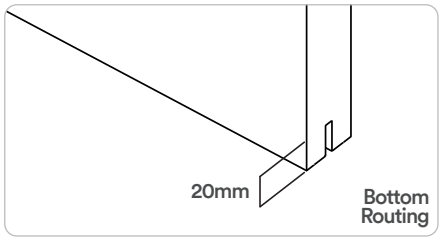

Step 1 | Pocket Assembly

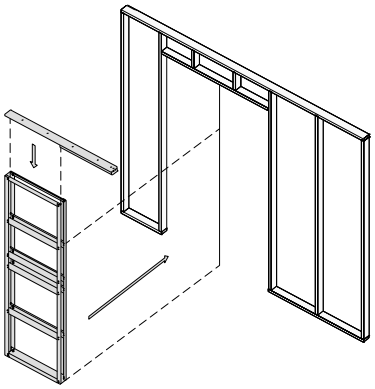

1A Fix header to pocket using A Screws, then fit pocket assembly to frame.

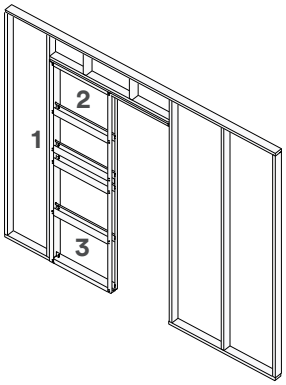

1B Screw off at backpost, header & bottom.

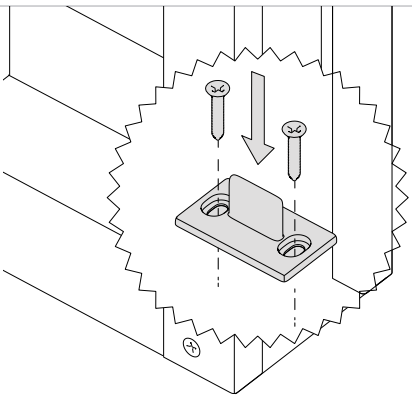

1C Fix door guide to floor using C Screws.

Step 2 | Reveal Assembly (CavKit) & Door Routing

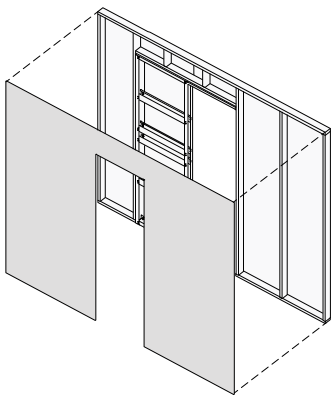

2A Install Plasterboard.

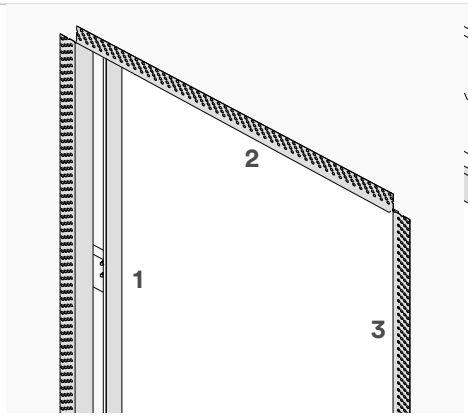

2B Install reveals, starting with the split jambs, then header, and end cap.*

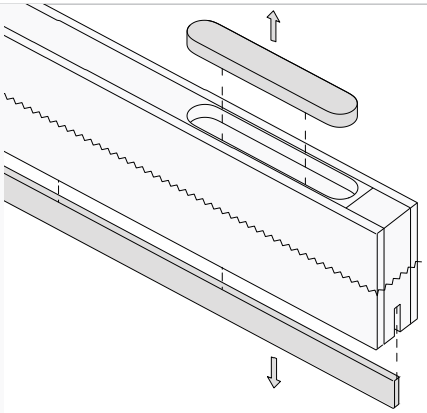

2C Route top and bottom of door.

* Trim the cap, split jamb reveals, and header reveals to your project's required size.
Full height units will not include the header reveals.

Information contained within this document supersedes all previous versions and is subject to change without notice.

Installation Instructions

Step 3 | Bracket Assembly

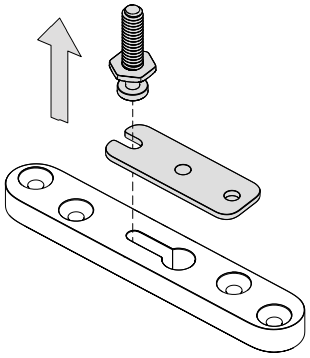

3A Remove plastic tab from bracket and set aside. Remove centre pin from bracket.

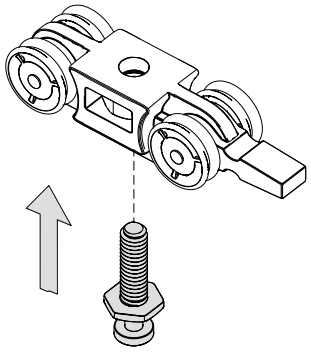

3B Screw centre pin into wheel carriage and adjust to desired gap by rotating clockwise or counter-clockwise.

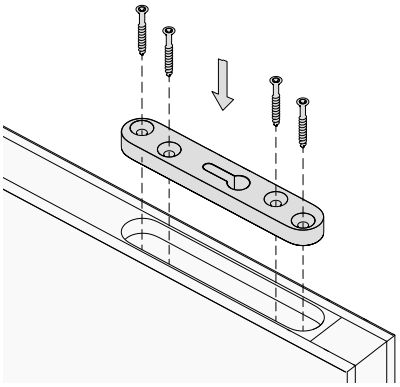

3C Screw base bracket into routing using B Screws.

Step 4 | Back Roller Installation in Door

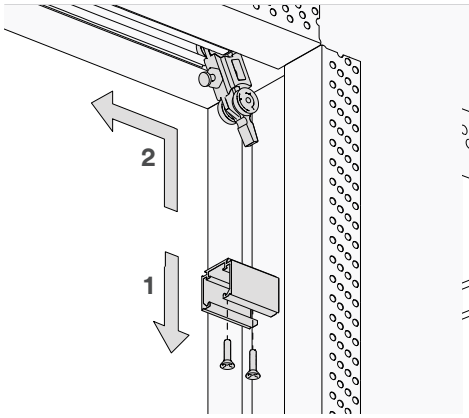

4A Unscrew end piece and place roller for back of unit into track. Set end piece and screws aside for reinstallation later.

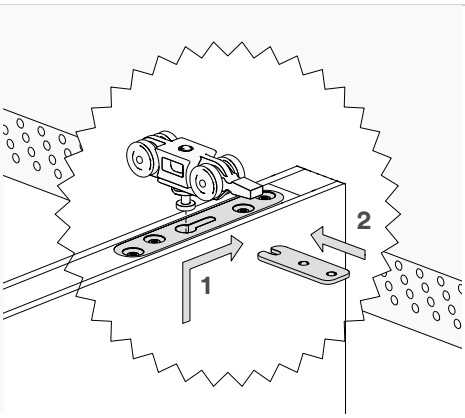

4B Bring door 90° to opening, lift and slide to connect centre pin into base bracket. Use plastic tab to fix centre piece in place.

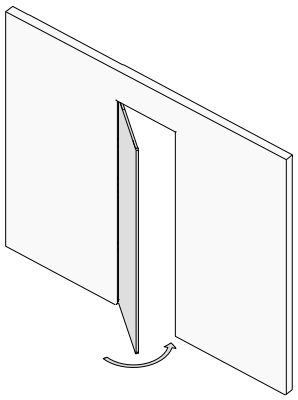

4C Rotate door to slide halfway back into cavity.

Step 5 | Front Roller Installation in Door

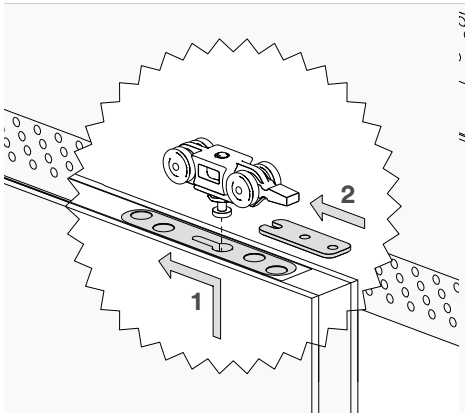

5A Place front roller into track. lift and slide to connect centre pin into base bracket. Use plastic tab to fix centre piece in place.

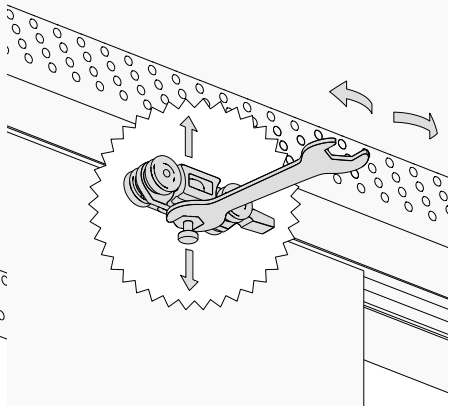

5B Adjust door height using the spanner provided. Rotate clockwise or counter-clockwise to adjust. Repeat on both rollers.

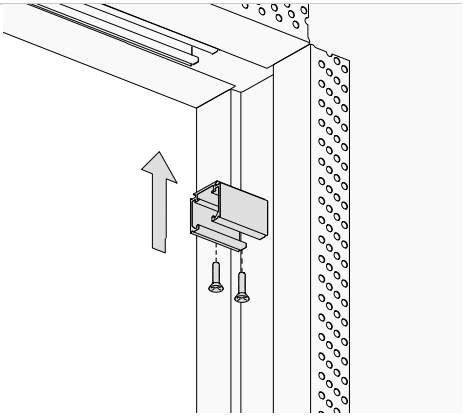

5C Attach end piece of track. Finish and paint door.

Information contained within this document supersedes all previous versions and is subject to change without notice.