Installation Instructions

ⓘ Electric strike not included with EzyJamb order.

Minimum door thickness for EzyJamb ISD is 57mm.

Non Fire-rated Application.

Step 1 | Preparation

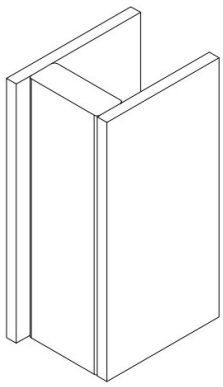

1A Jamb stud with plasterboard installed on wall.

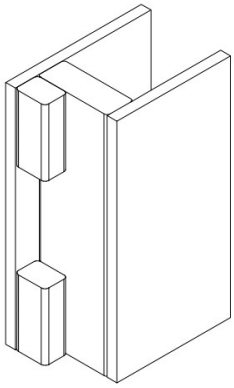

1B Optional timber backing around door frame for optimum fixing of plasterboard .

Step 2 | EzyJamb Installation

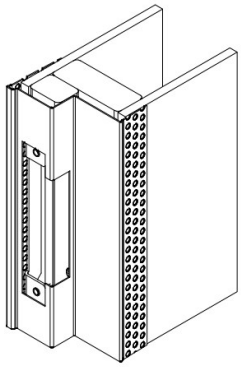

2A Install EzyJamb door frame. Refer to separate instructions.

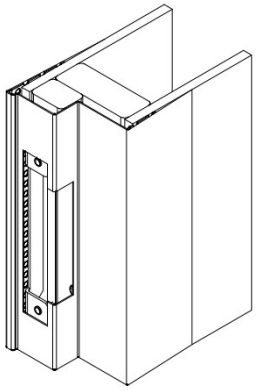

2B Apply plaster stopping compound to flush finish door frame and sand as required

Step 3 | Electric Strike Installation

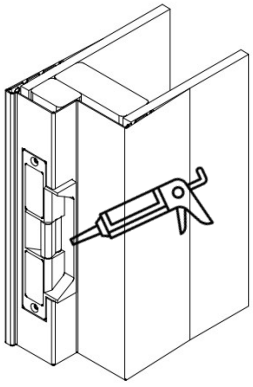

3A Install electric strike to strike manufacturers specifications. Caulk around strike as required.

Information contained within this document supersedes all previous versions and is subject to change without notice.