DRC Double Rebate Door Frame

Step 1

Ensure that the **structural opening** is square and level and is the correct size.

Make sure the rough opening has double studs, EZ Concept strongly recommends wood studs or a minimum .75mm metal studs on both sides of the opening. EZ Concept recommends double studs for this installation.

Stud opening sizes for Herline /Liftoff Hinges/Mortice Hinges (mm)

Width Single Door	Door Width + 25mm Clearance
Width Double Door	Double Door Width + 28mm Clearance
Full Height	Door Height + 13mm + Floor Covering
Less than Full Height	Door Height + 8mm + 10mm + Floor Covering

Stud opening sizes for RY60 Concealed Hinges*

Width Single Door	Door Width + 40mm Clearance (includes 25mm packer on hinge side)
Width Double Door	Double Door Width + 63mm Clearance (includes packers on both hinge studs)
Full Height	Door Height + 13mm + Floor Covering
Less than Full Height	Door Height + 8mm + 10mm + Floor Covering

**RY60 Stud Opening Detail: Prepare a 25mm thick packer fixed to hinge side of jamb stud. Route packer to create clearance cutouts at hinge locations.* Packer avoids cutting into the structural stud and maintains frame strength. *Refer to the RocYork RY60 Installation Instructions document.*

ⓘ When using concealed hinges, the packer must be **notched** at each hinge location to ensure proper fitment.

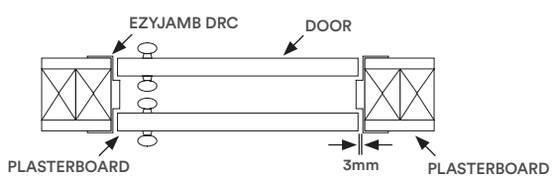

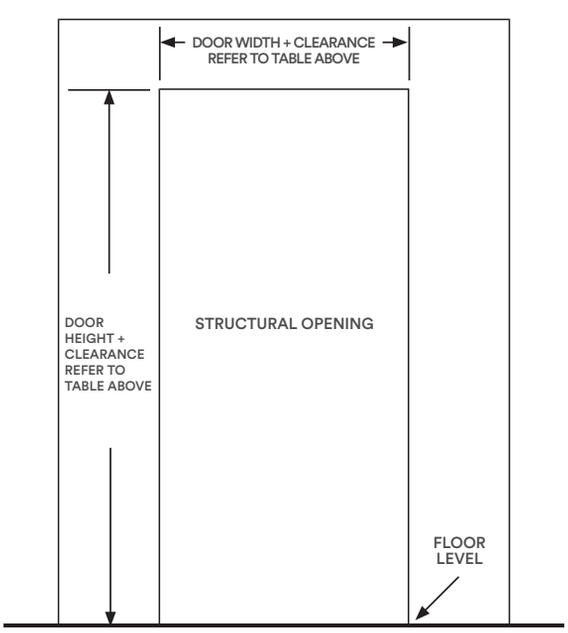

Step 2

Fasten hinge side first, making sure jamb is level and as tight against stud opening as possible. Then screw at 200mm centers up stile, screwing back through plasterboard into stud work See *Detail 'B'* and *'C'*.

Double screw all ends as *Detail 'D'*. and beside hinge position - both above and below hinge as *Detail 'E'*.

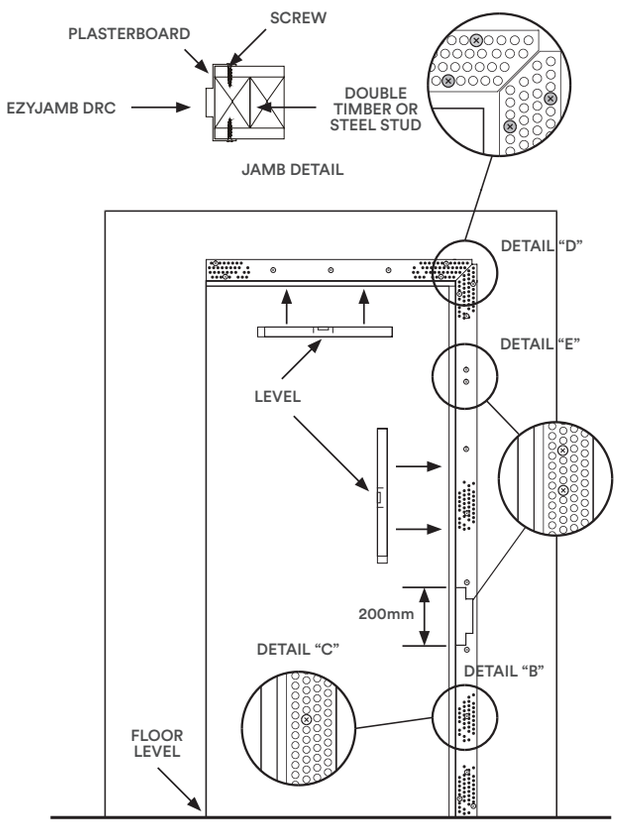

Step 2A | Head Installation

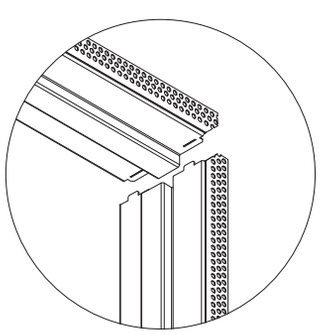

Locate fixing tabs to header.

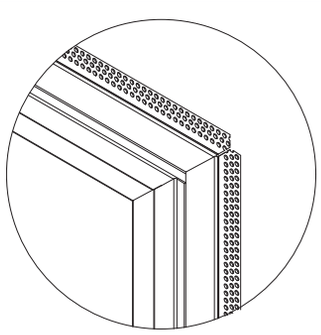

Corner Detail Completed

DRC Double Rebate Door Frame

Step 3

Fasten the final vertical section (strike jamb) below the head section. Ensure that the spacing between the two vertical sections are spaced evenly at the required distance.

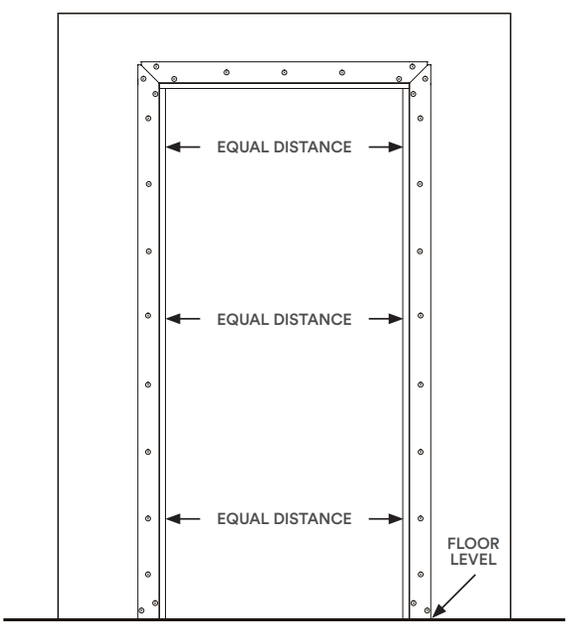

Step 4

Ensure the perforated side strips sit flat against the plasterboard to enable the jamb sections to be easily set into the wall surface. All the corners must be taped/jointed as in detail 'F'. Finish the jamb with approved plaster/jointing compound.

Hang the door in position leaving about 3mm clearance from the top and the hinged side using the EzyJamb Standard or Concealed Hinges. Surface mount the striker plate into position to align with the latch plate punching.

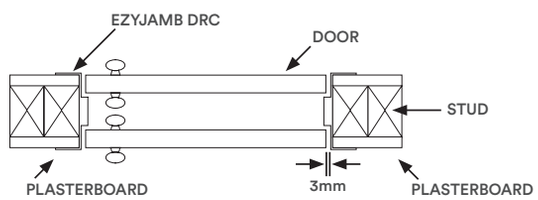

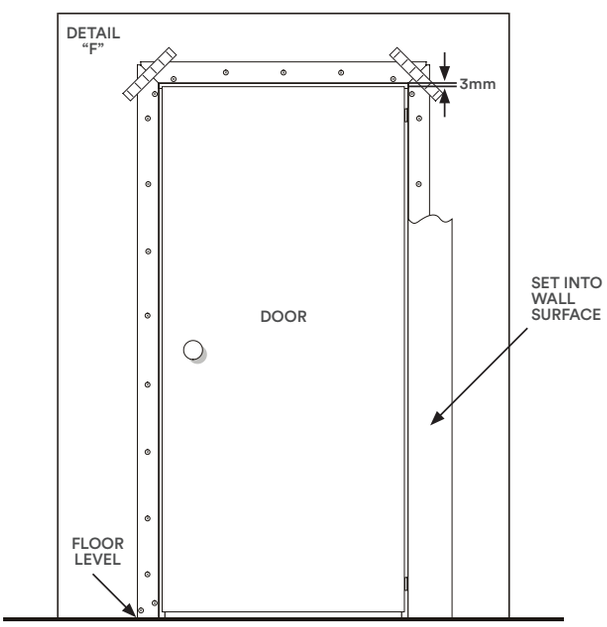

Completed Installation

The completed jamb is flush finished and can be primed and painted in with the wall to fully conceal any fixing, achieving simple clean lines around the door face.

For further information or assistance in installation of EzyJamb products, please visit:

www.ezconcept.com.au/resources/

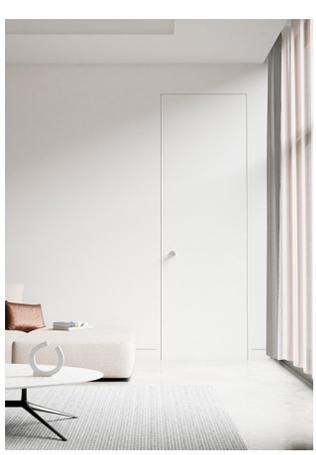

Information contained within this document supersedes all previous versions and is subject to change without notice.